

During programming logger, parameter GPS INTERVAL [hours], has to be chosen, otherwise settings will not be send!

The screenshot shows three sections of settings:

- GPS-GSM SETTINGS:**
 - GPS INTERVAL [hours]: 1h
 - ON HOURS [UTC]: 00
 - OFF HOURS [UTC]: OFF
 - SENSORS: OFF
 - ACC REPORT: OFF
 - SMS BUFFER: OFF
- GPS-UHF SETTINGS:**
 - GPS INTERVAL [minutes]: 15min
 - ON HOURS [UTC]: 00
 - OFF HOURS [UTC]: 00
 - ACCURACY: ECO
 - GPS TIMEOUT: 90sec
 - UHF INTERVAL: 5min
 - STOPS IN BASE: NO
 - ADDED DATA: SP
 - VHF/UHF: OFF
- ACCELEROMETER SETTINGS:**
 - INTERVAL [minutes]: 10min
 - SAMPLING [Hz]: 5
 - N SAMPLES: 16

CHANGE:

```

SET DATE [CET]
2019-02-28 09:41
SENDING DATE [LOC]
2019-02-26 13:55
CONFIRMATION DATE [LOC]
2019-02-26 17:02
RESCUE SENT [LOC]

U COMMAND [LOC]

COMMAND = MANUAL
GPS-GSM SETTINGS:
GPS INTERVAL = 1h
DUTY HOURS = 00 - OFF
ACCURACY =
SENSOR = OFF
GPS TIMEOUT = 90sec
VHF/UHF =
ACC REPORT = OFF
SMS BUFFER = OFF
GPS-UHF SETTINGS:
GPS-UHF SETTINGS = CHANGE
GPS INTERVAL = 15min
DUTY HOURS = 00 - 00
UHF INTERVAL = 5min
STOPS IN BASE = NO
SPEED/ALTITUDE = SP
VHF/UHF = OFF
    
```

UHF data are collected.

OFF:

```

SET DATE [CET]
2019-02-28 09:43
SENDING DATE [LOC]
2019-02-26 13:55
CONFIRMATION DATE [LOC]
2019-02-26 17:02
RESCUE SENT [LOC]

U COMMAND [LOC]

COMMAND = MANUAL
GPS-GSM SETTINGS:
GPS INTERVAL = 1h
DUTY HOURS = 00 - OFF
ACCURACY =
SENSOR = OFF
GPS TIMEOUT =
VHF/UHF =
ACC REPORT = OFF
SMS BUFFER = OFF
GPS-UHF SETTINGS:
GPS-UHF SETTINGS = OFF
    
```

UHF data are not collected.

NO CHANGE:

```

SET DATE [CET]
2019-02-28 09:44
SENDING DATE [LOC]
2019-02-26 13:55
CONFIRMATION DATE [LOC]
2019-02-26 17:02
RESCUE SENT [LOC]

U COMMAND [LOC]

COMMAND = MANUAL
GPS-GSM SETTINGS:
GPS INTERVAL = 1h
DUTY HOURS = 00 - OFF
ACCURACY =
SENSOR = OFF
GPS TIMEOUT = 90sec
VHF/UHF =
ACC REPORT = OFF
SMS BUFFER = OFF
GPS-UHF SETTINGS:
GPS-UHF SETTINGS = NO
GPS INTERVAL = 15min
DUTY HOURS = 00 - 00
UHF INTERVAL = 5min
STOPS IN BASE = NO
SPEED/ALTITUDE = SP
VHF/UHF = OFF
    
```

Logger will collect UHF data due to visible settings. If you want to turn this option off – choose OFF (please check picture above). The same rule refers to the accelerometer settings.