

How to change logger's name and the number.

The ID CHANGER can be used to all loggers with the UHF link (Uria, Alle, Skua, Harier,...)

- Connect the base station to the PC;
- Run the ID CHANGER;
- Select COM port;
- Wait for messages in the text window, showing, that the base station is working;
- Write into the text boxes logger's name, only upper case characters, except "R" are allowed;
- Select existing logger's number and a new one (number). To change only the name, use the same number in "existing number" and "new number" boxes;
- Use the magnet to restart the logger, in a few seconds a new name will be received by the base station. Wait for confirmation in the text window;
- Repeat this procedure for all loggers;
- When programming is finished, disconnect the base station from USB port to leave programming mode.

After changing the name or number, new settings HAVE to be send to the logger.

- Connect again the base station;
- Run the Tracker;
- Send new settings to all loggers which have got new names.