




Upgrading the CREX logger:

- 1) Switch off the Tracker application and disconnect base station from the PC.
 - 2) Run application Upgrade_xxxx_xxxxx.exe adequate to your logger from Ecotone FTP:
<http://telemetry.ecotone.pl/public/UPGRADES/>
- Then wait for announcement "Please connect base to PC"
- 3) Connect Base station to the PC and wait
 - 4) After the base is started, UPGRADE button appears.

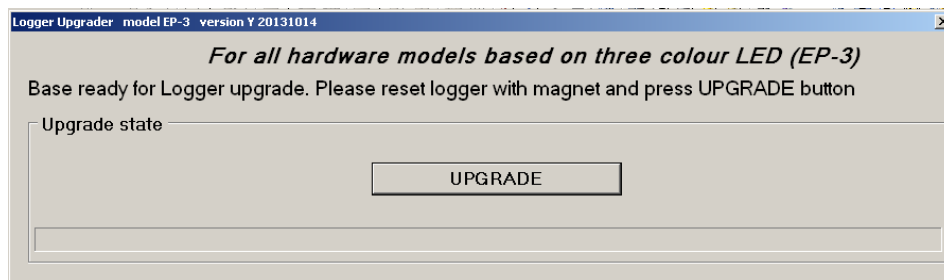

- 5) Turn on logger with the magnet. Logger will start to blink:
At the beginning You will see red light, next green flashing light and at the end solid green light will appear. When lightening will be stopped - immediately click UPGRADE button, and put logger about 20-30cm away from the base station.
- 7) While upgrading one logger **NEVER switch ON another one !!!**
- 8) When logger is upgraded, it will be automatically switched off. Switching off will be confirmed by series of fast blinks. Background in Communication window will change to green colour.
- 9) When programming of all loggers is finished, disconnect base station from the PC for a while.
It is necessary to use it again with the Tracker.

When the upgrading process fails because of any reason, repeat programming (**without resetting it with the magnet - only press UPGRADE button**).

*** DO NOT DISCONNECT BASE STATION OR DO NOT SWITCH OFF THE PC DURING THE UPGRADING PROCESS!**

*** NEVER SWITCH ON ANOTHER LOGGER WHILE UPGRADING IS IN PROGRESS!**

*** AFTER REPROGRAMMING TEST IF THE LOGGER WORKS: CHECK COLLECTING OF GPS POSITIONS AND SENDING THEM TO THE BASE STATION.**